



LAUREN'S LOUNGE

THEATER EQUIPMENT INSTRUCTIONS

Sources:

HDMI 1 = Cable Box (xfinity)

HDMI 2 = Apple TV

HDMI 3 = Media Console (on projector screen wall)

Projector:

Use Sony remote to power On/Off.

Cable TV:

Use xfinity remote. [Power will not turn on the Projector] If not on HDMI 1, use Theater Remote (Yamaha), Press Source HDMI 1.

Pro Tip - Live Sports - Press xfinity button. Scroll right to Sports.

Apple TV:

Use Apple TV remote.

In most cases using the Apple TV remote will automatically switch the source, if not, use Yamaha Theater Remote, Press Source HDMI 2.

Yamaha Receiver [Theater]:

Use Yamaha Theater Remote to control Projector Sources and Volume.

Yamaha Receiver [Bar/Stage]:

Use Yamaha Bar/Stage Remote to control Projector Sources and Volume.

Party Mode - All Zones:

Theater, Bar, Stage play the same source from Theater Download Yamaha MusicCast App. Connect to Lounge Wi-Fi. In the App connect to existing system. Click Link (top left), Click Theater, then checkbox Bar and Stage.

Bar TVs

Sources:

HDMI 1 = PC

HDMI 2 = Cable Box (xfinity)

Cable TV:

Use xfinity remote. Press Power (it should turn the TV and the Cable Box on).

If not on HDMI 2, use TV Remote, Press Source until HDMI 2 and hit OK.

Pro Tip - Live Sports - Press xfinity button. Scroll right to Sports.

Computer:

Use TV Remote. Press Power. If not on HDMI 1, Press Source until HDMI 1 and hit OK.

Power on Computer if no display comes up. Then use all-in-one keyboard/mouse to control the Computer.

Wi-Fi

SSID: Lounge Password: holman123